


KAYAK CARRIER

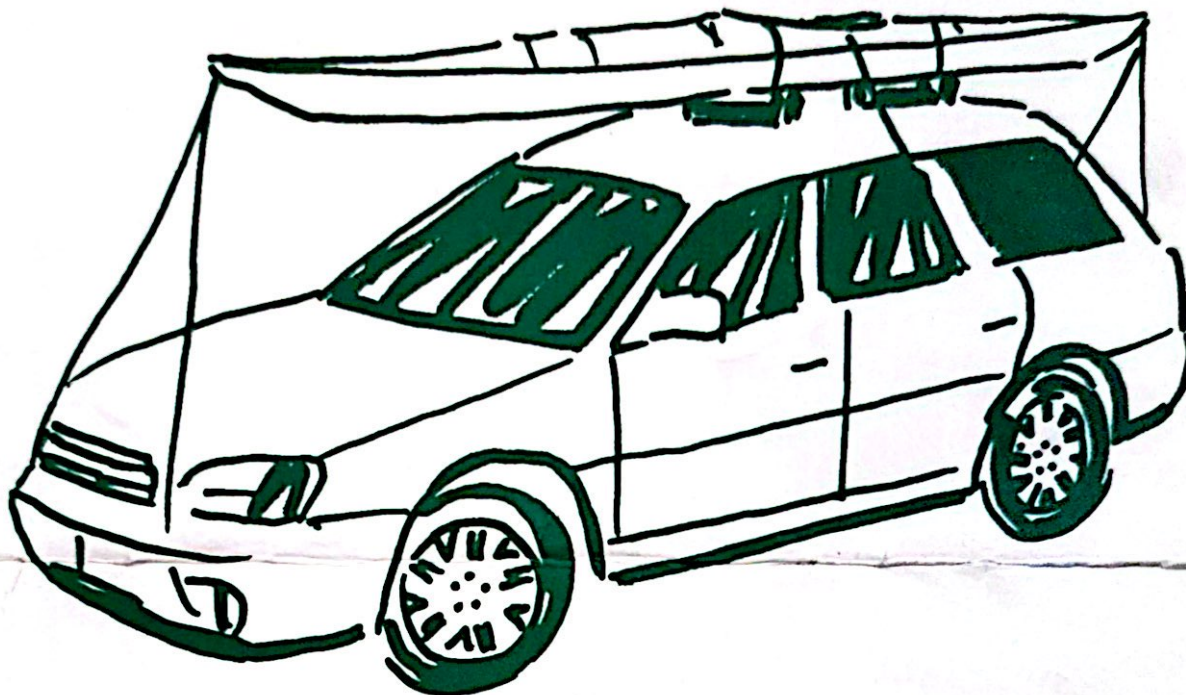

BENEFITS:

- FAST EASY LOADING OF WATERCRAFT
- NO TOOLS REQUIRED
- SIMPLE TO USE
- WON'T HARM PAINT
- FITS MOST VEHICLES

CONTENTS:

- (2) FOAM BLOCKS
- (2) 15' TIE DOWN ROPE
- (1) 15' OVER THE HULL CENTER STRAP
W/ CAMBUCKLE & BUCKLE PROTECTOR
- (2) 9' KAYAK BLOCK STRAPS
- (4) HEAVY DUTY GALVANIZED BUMPER HOOKS

KAYAK CARRIER INSTRUCTIONS

1. LASHING BLOCKS TO KAYAK

Unroll the 9' straps. Run each one of the straps through drilled hole on each block and go completely around kayak and buckle tightly. Both blocks should be secure to kayak.

2. LOADING KAYAK

Load kayak on car (cockpit-up) centered on roof. Reposition blocks if necessary, so that weight is evenly distributed on each block.

3. OVER-THE-TOP STRAP

Unroll 15' center strap. Open car doors on each side. Throw non-buckle end of the center strap over the middle of the kayak, letting the ends hang on either side of the car. Pull the strap tight and run the ends through open doors on each side. Buckle tightly on the inside of car. The center strap can now be adjusted for tension without leaving the car.

IMPORTANT! Make sure bottom blocks and area of roof under blocks are clean and free of debris. On rainy days, be sure to cover exposed cockpit. Locate blocks as close to front and rear of car roof as possible.

4. SECURING FRONT AND BACK

Most kayaks have a place at each end or a place where a rope can be pulled through. Take one end of the rope and tie a six inch loop. Take opposite end of rope from loop and place through end of kayak. Pull it down around car bumper and up to starting point. Go through the loop and pull down to tighten and tie a knot. Do this on each end until blocks are compressed tightly to roof. On many cars, you have the option of running the ropes through the towing rings located under each bumper. NOTE: Body styles of vehicles vary. Adapt this basic method of application to your particular vehicle. Use supplied hooks as needed.

IMPORTANT! Make sure no part of the kayak contacts car roof.

IMPORTANT! DO NOT ATTACH HOOK TO BUMPER.

5. IMPORTANT USE & CARE TIPS

Limit transport distance to 250 miles. Clean pad and roof surfaces before use. Check strap tension frequently. Keep ropes away from exhaust system and sharp or abrasive surfaces. Locate blocks close to front and rear of car roof. Ensure watercraft does not touch car roof after tightening straps.

6. SAFETY CHECK

After driving about five miles, stop and check to make sure straps and ropes are still tight and kayak is secure on top of car. Check to make sure no sharp or abrasive surfaces touch straps. To prevent strap hum or buzz at high speeds, simply fold the sides of the strap together and wrap with tape or a shielded garbage bag tie.